

AT Power Throttles Ltd


Unit 9, Chestnut Drive
Wymondham,
Norfolk
NR18 9SB

Tel: +44 (0)1953 857800
Email: info@atpowerthrottles.com
Web: www.atpowerthrottles.com



PUMP PRESSURE RELIEF VALVE ADJUSTMENT

THE PRESSURE RELIEF VALVE (PRV), IS A SELF CONTAINED SYSTEM AND DOES NOT REQUIRE ANY PARTS TO BE REMOVED OR LOOSENED

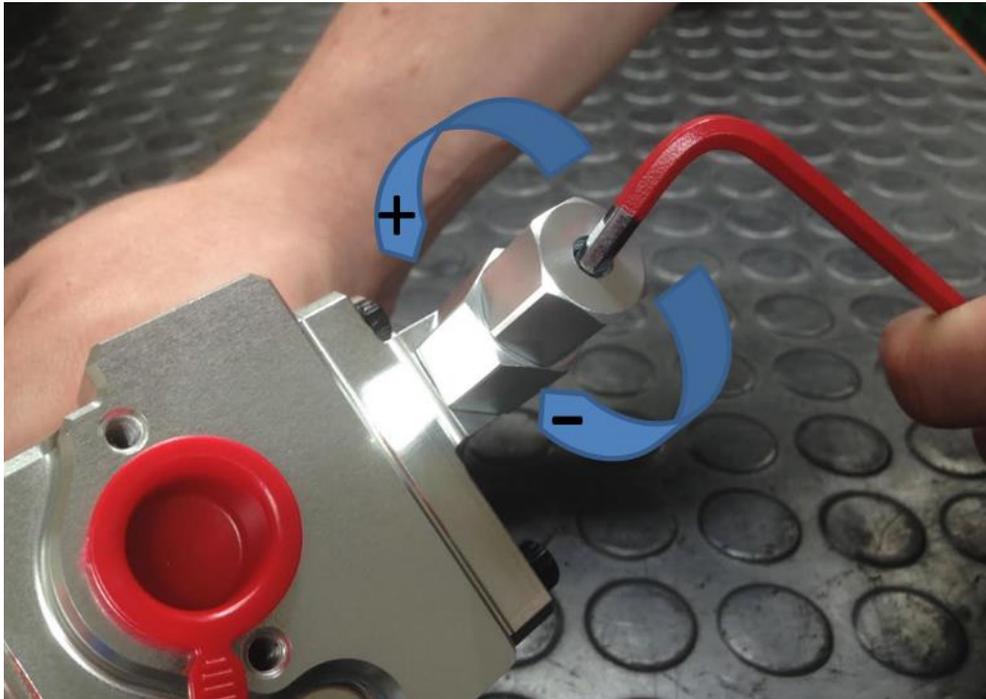

USING A 4MM ALLEN KEY, ADJUSTMENT OF THE PRV IS AS FOLLOWS:

CLOCKWISE WILL REDUCE PRESSURE.

ANTI-CLOCKWISE WILL INCREASE PRESSURE.

AT MINIMUM PRESSURE THE PRV WILL LOCK AND NOT ROTATE FURTHER.

AT MAXIMUM PRESSURE THE PRV WILL CONTINUE TO ROTATE BUT THE PRESSURE WILL NOT INCREASE.

MAXIMUM OF 15 TURNS BETWEEN MINIMUM AND MAXIMUM PRESSURE.

IT IS RECOMMENDED THAT FINAL ADJUSTMENT IS MADE WHEN THE ENGINE HAS REACHED OPERATING TEMPERATURE AND THE OIL IS AT ITS LOWEST VISCOSITY

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regards to purchase orders, the agreed particulars shall prevail. AT Power does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.